

SWISS LEGEND



Customer Service

Toll Free: 1-866-746-7794

Fax: 1-954-985-1828

www.swisslegend.com



THE SWISS LEGEND STORY

The word “**Legend**” was first used in the English language in the 14th Century and has its origins in the medieval Latin language. A Legend is a story about mythical events whose heroes and heroines produce extraordinary results that inspire. For over a quarter of a century the makers of Swiss Legend have created their own legendary reputation by bringing their loyal customers timepieces steeped in tradition, design and versatility.

Swiss Legend is a brand unlike any other. It is dynamic. It is modern. It is alive.

At the very core of the Swiss Legend design philosophy rests our commitment to stylish, distinctive timepieces that harmoniously balance cutting edge style with old world precision and accuracy.

All Swiss Legend watches are meticulously crafted to exacting standards and feature the highest quality Swiss Movements. Combine this with over 2,000 combinations of styles, materials and functions, and you have a watch collection that offers unparalleled quality, variety, style and functionality.

Watches tick. Legends inspire.

Contents

5 English

31 Español

Please activate your warranty at
www.swisslegend.com

GENERAL INSTRUCTIONS FOR MAINTAINING ALL SWISS LEGEND WATCHES

General Instructions:

PLEASE NOTE: Failure to follow these general instructions may void your 5 year warranty.

- 1. For timepieces with a screw down crown you must first gently rotate the crown counter-clockwise until it springs out. The crown must then be gently pulled out to the appropriate position for time or date setting.**
- 2. Never correct date between 9:00 PM and 1:00 AM.**
- 3. It is very important after setting your timepiece that you push in and screw down the crown firmly to ensure water resistance. Not doing so will void the warranty.**
- 4. Not screwing down the crown will cause water damage and void warranty.**
- 5. Please make sure you register and activate your warranty at www.swisslegend.com.**

INSTRUCTIONS FOR 2 OR 3 HANDS QUARTZ AND AUTOMATIC MOVEMENTS

PLEASE NOTE: For timepieces with a screw down crown you must first gently rotate the crown counter-clockwise until it springs out. The crown must then be gently pulled out to the appropriate position for time or date setting.

TIME SETTING FOR MODELS WITHOUT CALENDAR

1. Unscrew and/or pull out the crown all the way to Position 2. (Fig A.)
2. Adjust the time by turning the crown in the desired direction.
3. Push in and/or screw down the crown back into Normal Position. (Position 1 Fig A.)

TIME SETTING FOR MODELS WITH CALENDAR


1. Unscrew and/or pull out the crown to Position 2. (Fig B.)
2. Turn the crown until the previous day's date appears in the calendar frame.
3. Pull out the crown to Position 3, and advance the hour

and the minute hands until the desired date appears.
(Please set time according to AM or PM).

4. Adjust the time by turning the crown in the desired direction.
5. Push in and/or screw the crown back into Normal Position.
 (Position 1 Fig B.)


PLEASE NOTE: For best accuracy when setting your timepiece. If your watch has three hands, pull out the crown when the second hand points at 12 o'clock or "00" seconds.

Fig A.

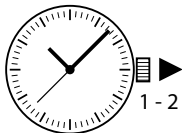

Model without calendar

Fig B.

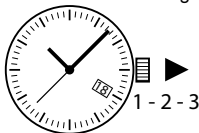

Model with calendar

(1 = Normal Position 2 = Calendar Position 3 = Time Setting Position)

PLEASE NOTE: It is very important after setting your timepiece that you push in and screw down the crown firmly to ensure water resistance. Not doing so will void the warranty.

INSTRUCTIONS FOR 3 HAND AUTOMATIC MOVEMENT

PLEASE NOTE: For timepieces with a screw down crown you must first gently rotate the crown counter-clockwise until it springs out. The crown must then be gently pulled out to the appropriate position for time or date setting.

Instructions:

Wind watch manually by turning the crown in the closed position approximately 25 to 35 times for a full wind.

If your watch will be worn daily your watch will only need to be manually wound once a week to ensure better accuracy on your timepiece.

If not worn daily watch should be kept on a watch winder.

Please refer to www.swisslegend.com for automatic winding chart on winding directions.

Link : <http://www.swisslegend.com/>, under Instructions and Catalog.

SWISS LEGEND CHRONOGRAPH INSTRUCTIONS

(ETA-G10.211, ETA 251.272, Ronda 5030D, or similar)

PLEASE NOTE: You must first gently rotate the crown counter-clockwise until it springs out. The crown must then be gently pulled out to the appropriate position for time, date and/or chronograph setting.

Instructions:

Watch Functions:

Display by means of hands: Hours, minutes, small second at 6 o'clock. Mechanical date showing through aperture in dial. Counters 1/10 second, 60 seconds, 30 minutes and day. Functions: ADD, Split.

The crown has three positions:

Normal Position, when worn: the crown pushed in and screwed tightly against the case assures water resistance.

Date Setting:

Unscrew and/or pull the crown out to Position 2. Rotate the

crown counter-clockwise to designate date. Push in and screw down crown to set the date.

(Please set time according to AM or PM).


Time Setting:

Hours, minutes and seconds. Unscrew and/or pull the crown out to Position 3. The second hand will stop. Turn the crown clockwise to the designated time and push and screw crown in.

Chronograph Functions:

Push-button A: Start & Stop Chronograph Functions.

Push-button B: Reset Chronograph Functions.

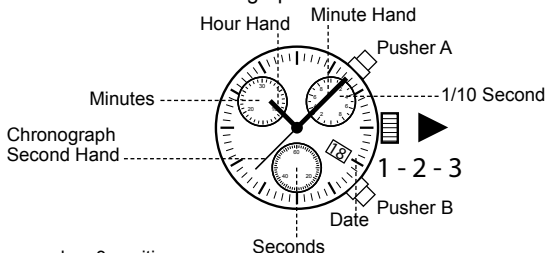

The crown has 3 positions:

1 = Normal Position 2 = Calendar Position 3 = Time Setting Position

SWISS LEGEND RESETTING CHRONOGRAPH INSTRUCTIONS

(ETA-G10.211, ETA 251.272, Ronda 5030D or similar)

Instructions:

*Refer to Illustration Pg. 10

To Reset Split Second (1/10):

Unscrew and/or pull out the crown to Position 2 and press down on top pusher (A). Use the pusher to adjust (by repeatedly pressing or press and hold down for quick setting until set to "00" seconds) and push crown in and screw down gently.

To Reset Chronograph Second Hand:

Unscrew and/or pull out the crown to Position 2 and press down on bottom pusher (B). Use the pusher to adjust (by repeatedly pressing or press and hold down for quick setting until set to "00" seconds) and push crown in and screw down gently.

To Adjust Minute Counter:

Unscrew and/or pull out the crown to Position 3 and press down on top pusher (A). Use the pusher to adjust (by repeatedly pressing or press and hold down for quick setting until set to "00" seconds) and push crown in and screw down gently.

SWISS LEGEND

CHRONOGRAPH INSTRUCTIONS

(ISA 8172 or similar)

Instructions:

Watch Functions:

Display by means of hands: Hours, minutes and seconds.
Mechanical date showing through aperture in dial. Analog chronograph with 30 minute counter, day and date.

Time Setting:

Unscrew and/or pull the crown out to Position 3. Turn clockwise or counter-clockwise to reach the desired time. Push crown back to Position 1 and screw the crown in.

Day Of The Week Setting:

Unscrew and/or pull the crown to Position 3. Turn counter-clockwise the necessary revolutions to change the day. This should always be done before setting the date.
(Please set time according to AM or PM).

Date Setting:

Unscrew and/or pull the crown to Position 2. Turn crown


clockwise to set date. Push crown back to Position 1 and screw the crown in.

Reset Chronograph Second Hand & Minute Counter:

Press and hold down Pusher A and B simultaneously for 2-3 seconds. Then set the minute counter to 30 by pressing down on Pusher B. Once set push down on Pusher A to set the chronograph second hand. Press Pusher A and B simultaneously to complete the setting.

PLEASE NOTE: Never correct date between 9:00 PM and 1:00 AM.

CHRONOGRAPH (* Please refer to instructions on Pg. 12)

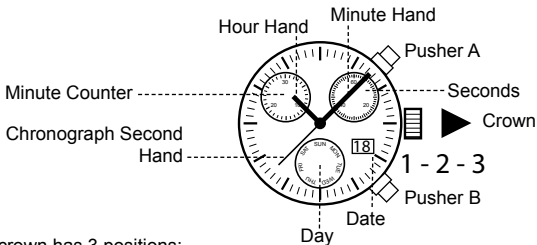

The crown has 3 positions:

1 = Normal Position 2 = Calendar Position 3 = Time Setting Position

SWISS LEGEND

GMT INSTRUCTIONS

(ISA 8176/2050 or similar)

Instructions:

Watch Functions:

Display by means of hands: Hours, minutes, small second at 2 o'clock and 24 time zone. Date disc showing through aperture in dial.

Functions: GMT or Second Time Zone in 24 hour display.

Time Setting:

Hours, minutes and seconds. Unscrew and/or pull the crown out to Position 3. The second hand will stop. Turn the crown clockwise to the designated time and push and screw down crown in gently.


Date Setting:

Unscrew and/or pull the crown out to Position 2. Rotate the crown counter-clockwise to the designated date. Push in and screw down crown gently to Position 1.


2nd Time Zone Function:

Pull the crown out to Position 2. Press Pusher A : to set 24H hand. Push in and/or screw the crown back into Normal Position.

GMT Functions

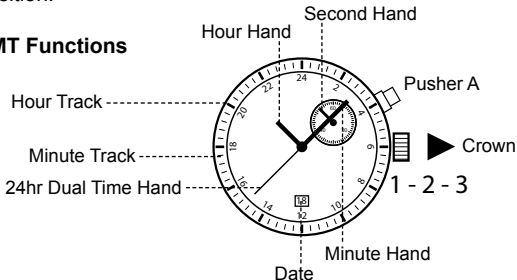

2nd Time Zone Functions

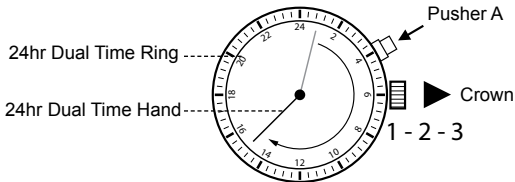

GMT – TRIPLE TIME ZONE MOVEMENT


Crown B

Turns Clockwise &
Counter-Clockwise

Minute Hand

Hour Hand

World Cities Ring

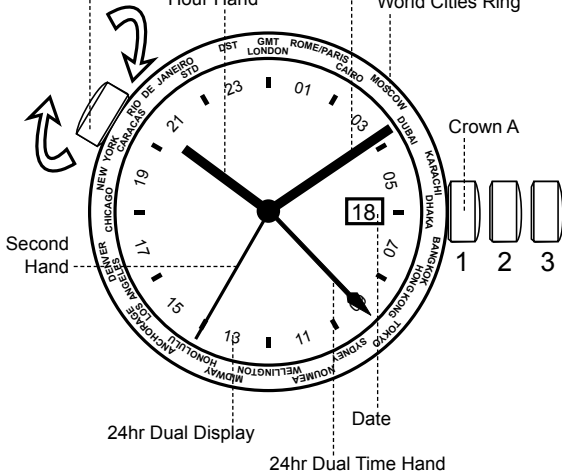

TO SET LOCAL TIME

1. Unscrew and/or pull out the crown to Position 3.
2. Turn crown clockwise or counter-clockwise.
3. 24 Hour Dual Time Hand will move in sync with local time.
4. Push crown back to Position 1 and screw it down.

PLEASE NOTE: NOT SCREWING DOWN THE CROWN WILL CAUSE WATER DAMAGE AND VOID THE WARRANTY.

TO SET LOCAL DATE

1. Unscrew and/or pull out the crown to Position 2.
2. Turn crown clockwise.
3. Push crown back into Position 1 and screw it down.
4. Do not set the date between 9:00pm and 1:00am as this may affect the accurate turning of the date disc the next day.

TO SET DUAL TIME

You can set your watch to another Time Zone, which will run simultaneously as the Local Time.

1. Unscrew and/or pull out the crown to Position 2.
2. Turn the crown counter-clockwise.
3. Set the Dual Time 24 Hour Hand to the corresponding dual time you wish to see. The Hand should match the

- timings on the inner 24-hour dual time ring on the dial.
4. When setting the dual time zone, for best accuracy it is recommended to set the time on the hour, eg 1:00pm, 8:00pm (00 minutes). Set the corresponding time on the hour by adjusting the 24 Hour Hand to the corresponding time zone.
 5. Push crown to Position 1. The Dual Time 24 Hour Hand will run in sync with Local Time reading.


(Please set time according to AM or PM).

TO READ THIRD TIME ZONE (Refer Illustration Fig A. on Pg. 19 and Fig B. on Pg 20)

Using the World Cities dial ring, it is possible to read a third time zone from your watch and at a glance read all the major Time Zones around the world.

1. Using Crown B turning clockwise or counter-clockwise, align the corresponding time on the 24 hour dual display to the city that matches the timezone of your corresponding local city.
2. The other cities will line up with their corresponding time on the 24 hour chapter ring.

Fig A.

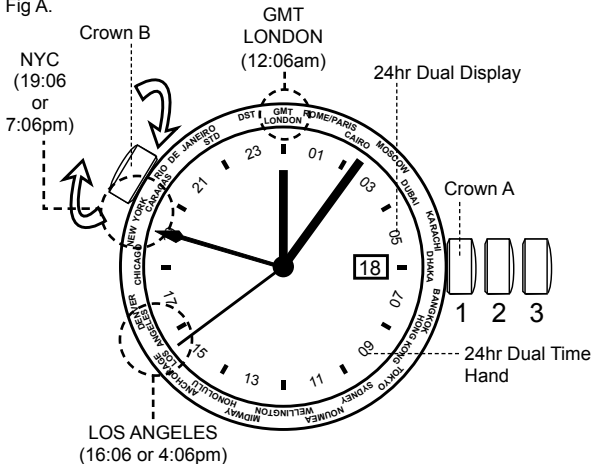

Example: You are in London (GMT), and it is 12:06 (midnight) align the World Cities ring to line up GMT to 24 (midnight). You can now read off other cities (timezones) at their respective times. (NYC 19:06, London is 5 hours ahead of NYC).

Fig B.

GMT LONDON (12:06am)

24hr Dual Display

Crown B

NYC (19:06 or 7:06pm)

Crown A

HONG KONG (8:06am)

LOS ANGELES (16:06 or 4:06pm)

20

Water Resistance:

Watches are ranked I through V for water resistance. Check the ranking of your watch in the following chart to determine proper use.

Rank	Case Designation	Splashes, Rain etc	Swim, car-wash	Snork- eling	Scuba Diving
I	-	NO	NO	NO	NO
II	30m Water Resistant	YES	NO	NO	NO
III	50m Water Resistant	YES	YES	NO	NO
IV	100m Water Resistant	YES	YES	YES	NO
V	200m Water Resistant or greater	YES	YES	YES	YES


Notes

- I Not water-resistant. Avoid all moisture.
- II Do not operate buttons underwater.
- III If watch is exposed to salt water, wash thoroughly and dry.
- IV Usable while scuba diving (except at depths that require helium-oxygen gas).


Push Button Deployment Clasp (Bracelet)

1. Push the 2 Clasp Release Buttons on either side of the bracelet to release the clasp.

Clasp Release Button

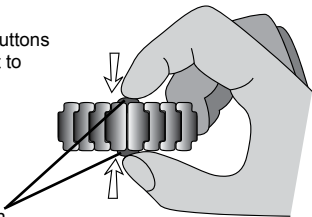



-
2. The Bracelet will release and open in an upward and outward motion as illustrated.

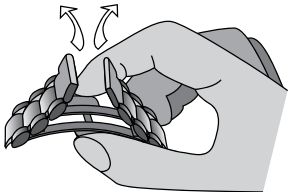

Note: If links need to be removed, please go to an Authorized Swiss Legend Repair Center or reputable jeweler. The SWI Group and Swiss Legend will not be liable for damages carried out by anyone other than ourselves.



Push Button Hidden Clasp (Strap)

1. Push the 2 Clasp Release Buttons on either side of the Buckle to release the clasp.

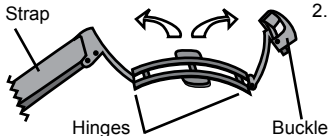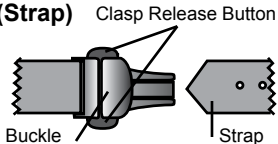

2. The Buckle will release and open in an upward and outward motion on small hinges.

3. When opened, the Buckle Clip may be popped open to allow insertion of the loose strap end to be pushed through and locked in place by the Pin.

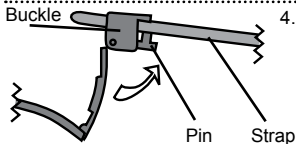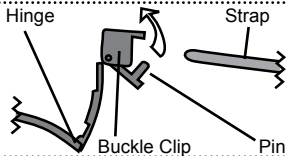

4. Once the strap is positioned the buckle clip may be locked in place. You may then put the watch on and fold both ends of the buckle back down until they lock into place.

5 YEAR WARRANTY

1. This guarantee is valid only at Swiss Legend and not at the place of purchase.
2. Swiss Legend guarantees your new watch movement for five years from the date of purchase against defects in material and workmanship. This guarantee does not cover the watch case, bracelet, strap, crystal, battery or crown, pushers or stem of the watch. If your watch is in need of a battery change, it is recommended that you take it to a Authorized Swiss Legend Repair Center. For further advice on battery changes, please contact us. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.
3. If your watch should require service during the period of warranty, please complete the following:
 - Include a copy of your original bill of purchase to validate the date of purchase.
 - \$10.00 check or money order (**DO NOT SEND CASH**) made payable to The SWI Group to cover shipping and

handling (Excludes Alaska and Hawaii). If \$10.00 is not included your return will not be processed. Additional insurance charges may apply.

- Please insure your timepiece for the full purchase price.
 - Please do not include the original gift box because it may not be returned.
4. Swiss Legend may at its discretion replace your timepiece for one with the same or greater value if yours is no longer available.
 5. This warranty will no longer be valid if this watch has been tampered with, taken apart, wet, or repaired by anyone but a Swiss Legend Authorized Repair Center. In the case of water resistant watches, cracking of the crystal glass or loosening of the watch case back and/or the watch crown, will invalidate this warranty. Please refer to paragraph 2 of this warranty in the case of battery changes.

Package your watch carefully, enclose the necessary documents, and return to:

SWISS LEGEND

101 South State Road 7, Suite 201
Hollywood, Florida 33023.

Toll Free: 1-866-746-7794
Fax: 1-954-985-1828

Please activate your warranty at
[www.**swisslegend**.com](http://www.swisslegend.com)

SAPPHITEK™ CRYSTAL

SWISS LEGEND takes pride in manufacturing timepieces using the highest standard for materials and craftsmanship. Your SWISS LEGEND timepiece is equipped with a SAPPHITEK™ CRYSTAL and is protected by a 10-year warranty against deep scratches and cracks. SWISS LEGEND is the first watch company to offer a 10 year warranty on the crystal. For warranty information on other aspects of your watch please refer to the warranty that arrived with your SWISS LEGEND timepiece.

SAPPHITEK™ CRYSTALS exhibit superior impact resistance to the commonly used sapphire crystals because they are manufactured utilizing a pure multi-material, high-heat process.

SWISS LEGEND chooses SAPPHITEK™ CRYSTALS for its timepieces because they offer higher pressure, water, shock, wear, and heat resistance, and are more durable than Mineral Crystals.

This warranty is only valid with watches that contain SAPPHITEK™ CRYSTALS and are clearly marked.







NOTES :

SWISS LEGEND



Customer Service

Toll Free: 1-866-746-7794

Fax: 1-954-985-1828

www.swisslegend.com